

Your Guide To Cabinet Refacing

- Cabinet doors in 100% Hickory, Cherry, Maple, and Oak
- Various styles - Flat panel, Raised panel and Shaker doors
- Simple as 1-2-3 to install
- Doors starting at \$19.00



EASY 3 STEP PROCESS

To have a new kitchen or bath in about a weekend!

1
Remove the
old doors

2
Apply new covering
to frame or sand old frame

3
Install new
doors and fronts

HOW TO GET STARTED



1) Choose door color, finish and style

Cherry, Hickory, Maple (Caramel, Natural & Cherry), or Oak. Raised panel, arched panel or Shaker doors.

2) Measure your doors and drawer front

Always write the width first. Write down all the sizes and quantities. Standard cabinet doors are 22" long for the base cabinets and 28" or 40" long for the wall cabinets and drawer fronts are 5 1/8" , 7 9/16" , 9 9/16" and 10 9/16" standard. If your cabinets are not standard then you need to measure the openings.

3) Get a price quote

Once you have all your sizes and quantities request a price quote at sales@fourlesscabinets.com.

4) Order Doors


Once you have looked over and are satisfied with your quote place your order for the doors and drawer fronts. They take about a week to get.

5) Inspect door

Inspect all doors and drawer fronts for sizes and quantities upon delivery.

6) Remove old doors

Unscrew hinges from the frame of cabinets (F3). If using the same hinges again save all hardware in zip lock plastic bags.

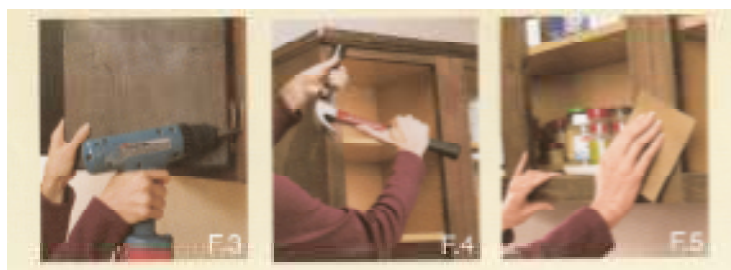

7) Clean and resurface or sand cabinet frames.

Remove any cabinet moldings (F4) using the tip of a flathead screwdriver. Lightly sand the surface (F5). **DO NOT USE A POWER SANDER** unless you plan to stain the frames.

8) Cover End Panels.

Option 1: Wood Panel/Veneer.

Apply wood panel/veneer (F6-F8).



Option 2: Door Panel.

You can use doors to cover side panels and add a rich look to your décor. [F9]

9) Frame Covering With Wood Veneer.

Most cabinets have a 1.5" or 2" frame. Home Depot and Lowe's sell a self adhesive veneer in rolls (Band-It) that is made for this project. Or you can sand the frames and stain as well.



10) Prepare Drawer Boxes For Drawer Fronts.

First determine whether your drawer boxes are three-sided or four-sided. If the drawer front is the forward wall, it is a three-sided drawer box (F23). If the drawer front is mounted to a separate piece, it is a four-sided drawer box (F25). Remove the old drawer front.

- Remove drawer slides.
- Using a saw, trim the drawer front so that no edges extend beyond the top, bottom or sides of the drawer box (F24).
- Turn the box around so that the old drawer front is now the back.
- Re-attach the drawer slides, making sure they are centered and flush with the front edge.



Three Sided

Four Sided

11) Install Drawer Fronts.

- Re-attach the drawer slides, making sure they are centered and flush with the front edge.
- Center the new drawer front on the box and temporarily secure with screws (F26).
- Slide the drawer box into the opening to check alignment. Adjust as necessary, then tighten the screws.



12) Install Doors.

Prior to installing doors you may want to polyurethane the doors and drawer fronts for added protection against water and dirt.

